


## DS/1000 & DS/2000 Door Scope Installation Instruction

Required tools for easy installation: Power Drill, 2 3/8" Hole Saw and 1/8" Drill Bit.

[Instructions are for all doors whether solid, hollow or metal]

- Step 1. Stick the provided transparent template on outside of door at desired install position
- Step 2. With a 2 3/8" hole saw (with a drill bit attached inside), starting on exterior side of door, drill 2 3/8" hole until drill bit protrudes through interior side of door at least 1/8" then go to inside and finish drilling hole out
- Step 3. Drill two 1/8" holes for retainer ring locking pins approximately 1/8" in depth, as indicated on template.
- Step 4. Separate the locking ring by unscrewing from main body
- Step 5. Insert main body into hole from exterior side and place with pins in the holes
- Step 6. Secure snug and turn the locking ring until contact with door surface.

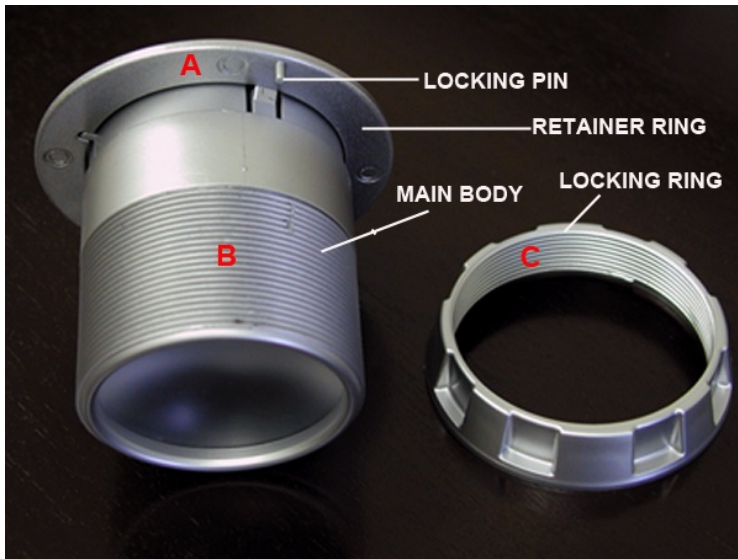

**CALL 800-480-6613**

SALES                      SERVICE                      INTEGRATION  
REPAIR                     INSTALLATION                      WARRANTY



**FBH ARCHITECTURAL SECURITY**

*Commercial Doors and Hardware*